

	PNC's	PNC	Serial Number Ranges
1	900277599	900277599	05220575 - 05220874
2	900277600	Electrolux	10221617 - 10221917
3	900277601		10221316 - 10221616
4	900277602		10321918 - 10322218
5	900277603		10232406 - 10232846
6	900277604		10322219 - 10323083
7	900277605		10333874 - 10334173
8	900277606		10332847 - 10333873
9	900277607		10434174 - 10434473
10	900277614		10634474 - 10634773
11	900277616		11544137 - 11544576
12	900277617		11947507 - 11948532
13	900277689		14259595 - 14259894
14	900279101		14462163 - 14462462
15	900279102		
16	900279104	900277600	05220875 - 05221315
17	900279105	Electrolux	10230624 - 10231064
18	900279107		10631065 - 10631365
19	900279155		10431366 - 10431665
20	900279157		11131666 - 11131965
21	900402073		11131966 - 11132405
22	900402074		11131666 - 11131965
			11040701 - 11041000
		900277601	02900001 - 02900302
		Electrolux	03000001 - 03000300
			05012314 - 05012753
			05114896 - 05115195
			05216398 - 05216698
			10319973 - 10320273
			10425928 - 10426227
			11126228 - 11126527
		900277602	03600001 - 03600304
		Electrolux	05115797 - 05116096
			10330323 - 10330623
			11543837 - 11544136
		900277603	03000301 - 03000743
		Electrolux	03000001 - 03000268
			03000269 - 03000300
			03500744 - 03501043
			04501044 - 04501483
			04501484 - 04502183
			04502184 - 04502347
			04706176 - 04706617
			04705433 - 04705873
			05113716 - 05114155
			05114156 - 05114455
			05114456 - 05114895
			05115196 - 05115496
			05317602 - 05318628

900277603	10218629 - 10219069
Electrolux	10219070 - 10219370
	10219672 - 10219972
	10219371 - 10219671
	10220274 - 10220574
	10427995 - 10428858
	11128859 - 11129158
	11434774 - 11435074
	10629159 - 10630022
	10926528 - 10927392
	10927694 - 10927994
	10927393 - 10927693
	10630023 - 10630322
	11645441 - 11645740
	11544577 - 11545440
	12348833 - 12349272
	12348533 - 12348832
	14259905 - 14260206
	14360517 - 14360816
	14360207 - 14360506
	14360817 - 14361116
	14461127 - 14462152
	14563515 - 14563814

900277604	05216699 - 05216999
AEG	05217000 - 05217300
	10325327 - 10325627
	10325628 - 10325927

900277605	10323084 - 10323384
AEG	10423385 - 10423684
	11745741 - 11746040
	11543397 - 11543836
	14563825 - 14564125

900277606	05213114 - 05213414
AEG	05213415 - 05213715
	10523685 - 10523985

900277607	05115497 - 05115796
AEG	05216097 - 05216397
	05317301 - 05317601
	10423986 - 10424425
	10324726 - 10325026
	10425027 - 10425326
	10424426 - 10424725
	14562913 - 14563514

AEG	900277614	04806920 - 04807223
-----	-----------	---------------------

900277616	02700001 - 02700303
Electrolux	04807224 - 04807527

900277617	1021-40188 - 1021-40700
BORK	3421-49788 - 3421-50813
	2720-00001 - 2720-01028
	2820-00001 - 2820-01026
	2820-01027 - 2820-02052
	4620-02053 - 4620-03078
	4720-03079 - 4720-04104
	5020-10260 - 5020-11286
	5020-11287 - 5020-12313

900277689	1021-39675 - 1021-40187
BORK	3620-02053 - 3620-03080
	3620-03081 - 3620-04106
	4620- 04406 - 4620 - 05432
	4820- 07528 - 4820 - 08556
	3620-02053 - 3620-03080
	3620-03081 - 3620-04106
	4620- 04406 - 4620 - 05432
	4820- 07528 - 4820 - 08556
	1021-39675 - 1021-40187

900279101	00300341- 00301215
Electrolux	00800004 - 00800952

900279102	00600006 - 00600683
Electrolux	00800004 - 00800005

900279104	00600004 - 00601518
Electrolux	00800004 - 00800029

900279105	00500004- 00502376
Electrolux	00800004 - 00800053

AEG	900279107	00400004 - 00400171
-----	-----------	---------------------

	900279155	00600006 - 00600688
	Electrolux	00700006 - 00700550
		00800004 - 00800019

	900279157	00401846 - 00402035
	BORK	00600006 - 00601835
		00700006 - 00700916
		00800006 - 00800792

	900402073	3321-53029 -3321-54055
	BORK	4021-57095 - 4021-58120
		4121-58121 - 4121-59146

BORK	900402074	3521-54569 - 3521-55594
------	-----------	-------------------------